

Directions for Samsung TV/DVD Player

Large Remote – TV Remote

Small Remote – DVD Player Remote

TELEVISION CHANNELS

Every location has different lineups. You will need to auto-program your AIR channels at each new location you camp

- Turn on TV with Antenna
- Make sure the red light is on in cabinet
- Push menu button on TV remote (Green) twice
- Click on Antenna –arrow over and select “AIR” (arrow down and select “Cable” if you are in a campground that offers cable service that you can plug into the outside of the Phoenix Cruiser)
- Push down once to Auto Program
- Press “Search”

DVD

- Turn on TV
- Change source to “HDMI/CC Theater”
- Insert DVD
- Hit “Play”

SURROUND SOUND

- Make sure TV is on “AIR”
- TV needs to be on d/in
- Wait a few seconds and then you will hear the sound over the surround sound.

IPOD CRADLE

- Insert your iPod into the device in the cabinet and the TV will automatically switch to a grey screen.
- Select the music icon
- Your iPod selections will display just as you have them on your iPod and use the black buttons on the bottom of your remote to play your music.

AUX 1 & 2

- You may plug any MP3 player or any item that you would normally use in an auxiliary plug.

USB

- This port is for the use of a camera – should you want to display pictures on your TV (to view them on the larger screen)
- Plug in your USB cord from your camera
- The grey screen will pop up
- Select “Video” option
- Your pictures will appear

Note: This USB is not strong enough to connect to a computer.

USING ONE REMOTE

Since both your TV and your DVD/Surround sound are Samsung, you are able to use *one* remote instead of both the TV and DVD remote. How you do this is by using only the DVD remote (the smaller of the two)

You will find on the DVD remote in the top left corner a clear button, and above it you will find it is labeled Green for TV use and Orange for DVD/Surround Sound.

- Press the button one time to turn the button **green**. At this point it will function for your TV.
- Press the button twice to turn the button **orange**. At this point it will function for your DVD/Surround Sound